

## Instructions Prima Klima ECTC-1M Display Controller



### Step 1.:

Plug RJ45 connector in to the RJ45 socket.



### Step 2.:

Push button >2sec. to enter the menu.



### Step 3.:

Turn button to Temperature setting and push to enter, turn to set temperature.



### Step 4.:

Push button to get back in to menu. Turn button to Min. Speed and push to enter, turn to set minimum speed. (17% for example)



### Step 5.:

Push button to get back in to menu. Turn button to Max. Speed and push to enter, turn to set maximum speed. (38%=360m<sup>3</sup>/h)



### Step 6.:

Push button to get back in to menu. Turn button to Quit and save your adjustments by pushing the button.



### Step 7.:

The controller starts to do his job. Soon as temperature on sensor reach set temperature (blue), the speed from the fan swap to the maximum settings. If temperature drop down under set temperature the fan swap to the minumum speed.



### Step 8.:

If you want to use the fan controller manually without temperature settings, push button >2sec. to enter the menu. Turn button to Quit to Manual and push to enter. Regulate the speed manually over turning the button.

